





FEATURES

- Input voltage range: 3W+PE△196-305VAC or 3W+N+PE Y 340-530VAC or DC input 277-430VDC
- Compatible with multiple input modes: 3-phase 4-wire, 3-phase 3-wire, single-phase and DC
- PF value up to 0.98
- Low standby power consumption, high efficiency, low ripple & noise
- 20%-120% Ultra-wide range of voltage and current adjustment
- Parallel current sharing up to 20000W (3+1)
- 485 communication
- Double-sided conformal coating
- High I/O isolation test voltage up to 4000VAC
- Output short circuit, over-current, over-voltage, over-temperature protection
- Operating altitude up to 5000m
- OVCII
- 5 years warranty
- Safety according to IEC/EN/UL/BS EN62368

LMF5000-25Bxx is one of Mornsun's enclosed AC-DC switching power supply. It features universal AC input and at the same time accepts DC input voltage, cost-effective, low no load power consumption, high efficiency, high reliability and double or reinforced insulation. These converters offer excellent EMC performance and meet IEC/EN61000-4, CISPR32/EN55032, IEC/EN/UL/BS EN62368 standards and they are widely used in areas of industrial, LED, street light control, electricity, security, telecommunications, smart home etc.

| Selection Guide | | | | | | | |
|-----------------|---------------|-------------------|-------------------------|--|---|-------------------------------------|--|
| Certification | Part No. | Cooling Method | Output Power (W)* | Nominal Output Voltage and Current (Vo/Io) | Adjustable Range of Output Voltage ADJ(V) | Efficiency at 230VAC (%) Typ. | Maximum Capacitive Load at normal temperature (µF) |
| | LMF5000-25B24 | Air cooling | 4800 | 24V/200A | 23.5-28.8 | 90 | 100000 |
| | LMF5000-25B36 | Air cooling | 4968 | 36V/138A | 35-43.2 | 90.5 | 44000 |
| | LMF5000-25B48 | Air cooling | 5040 | 48V/105A | 47-57.6 | 91 | 25000 |

Note: *Under any conditions, the total power of the product should not exceed the rated power. When the output voltage is increased, the total output power cannot exceed the rated output power; when the output voltage is decreased, the output current cannot exceed the rated output current.

| Input Specifications | | | | | | | |
|-------------------------|------------------------------------|---------------------------|------------------|-----|------|------|------|
| Item | Operating Condition | Operating Conditions | | | Тур. | Max. | Unit |
| | Rated input (Certified voltage) | 3W+N+PE, Y Or 3W+PE, △ | Phase voltage | 220 | | 277 | |
| | AC input | 3W+N+PE, Y | Phase voltage | 196 | | 305 | \/40 |
| Input Voltage Range | | | Line voltage | 340 | | 530 | VAC |
| | | 3W+PE, △ | | 196 | | 305 | |
| | Single-phase input * | | | 196 | | 305 | |
| | DC input * | | | 277 | | 430 | VDC |
| I I . / . II | Rated input (Certified voltage) | | | 47 | | 63 | |
| Input Voltage Frequency | AC input | | | 47 | | 63 | Hz |
| | Rated input (Certified voltage) | | | | | 8 | A |
| Input Current | 230VAC-3W+PE △ | | | | | 15 | |
| | 400VAC-3W+N+PE Y | | | | | 9 | |
| Inrush Current | 230VAC-3W+PE △ | Cold s | tart | - | 45 | 75 | |

MORNSUN®

| | 400VAC-3W+N+PE Y | | 30 | 50 | |
|--|--|-------------|-------|---------|------------------|
| Inrush Current Integral (I ² t) | 230VAC-3W+PE △ | | 121.5 | 337.5 | A 2a |
| | 400VAC-3W+N+PE Y | | 54 | 150 | A ² s |
| Power Factor | △ 230VAC (Y 400VAC) | 0.95 | 0.98 | | |
| Start-up Delay Time | \triangle 230VAC (Y 400VAC), rated load | - | 2200 | | ms |
| Input Fuse | Built-in fuse | - | 16 | | Α |
| In more than all and a control of the control of th | Under-voltage protection start (Input voltag from high to low) | e drops 170 | | | \/AC |
| Input Under-voltage Protection | Under-voltage protection release (Input voltrom low to high) | tage rises | | 196 | VAC |
| Hot Plug | | | Unavo | ailable | |

2. *Without special instructions, all performance of the product are measured at 230V, room temperature 25°C and rated load.

| Item | Operating Conditions | } | | Min. | Тур. | Max. | Unit |
|-----------------------------|------------------------|-------------|-----------------------------------|---|---------------|----------------|-------------------|
| | Full load range (norm | | ıture) | | ±1 | | 01111 |
| Output Voltage Accuracy | Full load range (High | | | | ±3 | | |
| Line Regulation | Rated load | | | - | ±0.5 | - | % |
| Load Regulation | 0% - 100% load | | | | ±0.5 | | |
| Minimum Load | | | | 0 | | | |
| Stand-by Power Consumption | | | | | 20 | | W |
| | | | 230VAC-3W+PE △ | | | 150 | |
| | 20MHz bandwidth | 24V | 400VAC-3W+N+PE Y | | | 150 | |
| Ripple & Noise* | (peak-peak value) | | 230VAC-3W+PE △ | | | 200 | mV |
| | | 36/48V | 400VAC-3W+N+PE Y | | | 200 | |
| Temperature Coefficient | | | | _ | ±0.03 | | %/ °C |
| | 230VAC, 75% load | | | 20 | | | |
| Hold-up Time | 230VAC, rated load | | 14 | | | ms | |
| Short Circuit Protection | Restart and restore at | ter the sho | rt circuit disappear | Turn off the output after 5s (typ.) of constant | | | |
| | | | | current operation, and restore after restart 110% - 150% lo, two protection modes are | | | |
| | 230VAC, rated load | | nal temperature | available for self-recovery: A. Constant current B. The output voltage will be turned off aft- constant current lasting for 5s and will recovered. | | | r: d off after |
| Over-current Protection | | | temperature, temperature | > 110%lo, two protection modes are available for self-recovery: A. Constant current B. The output voltage will be turned off constant current lasting for 5s and will reconstant current lasting. | | | d off after |
| | 24V | | | ≤35V (Output voltage off, restart after recovery or clamp) | | | |
| Over-voltage Protection | 36V | | | 51V (Output voltage off, restart after recovery or clamp) | | | |
| | 48V | | | ≤68V | (Output volto | ige off, resto | ırt after |
| | 230VAC. | | er-temperature tection start | _ | - | 95 | |
| Over-temperature Protection | 100% full load | Ove | er-temperature tection release | 50 | | | - °C |
| | + | p. 10. | | 12V/0.1A (l | | | |

Note: 1.*Without special instructions, all performance of the product are measured at 230V, room temperature 25°C and rated load.

^{2. *}The "parallel cable" is used for ripple and noise test, output parallel 47uF electrolytic capacitor and 0.1uF ceramic capacitor, please refer to Enclosed Switching Power Supply Application Notes for specific information.





| Item | | Operating Conditions | | Min. | Тур. | Max. | Unit |
|--------------------------|----------------|----------------------------|---|-------------|---------------|--------------|------------|
| | Input - 😩 | Electric strength test for | 1min., leakage current <15mA | 2000 | | | |
| Isolation Test* | Input - output | Electric strength test for | 1min., leakage current <20mA | 4000 | | | VAC |
| | Output - 😩 | Electric strength test for | Electric strength test for 1min., leakage current <15mA | | | | |
| | Input - 😩 | Ambient temperature: 2 | 5 + 5℃ | 100 | | | |
| Insulation Resistance | Input - output | Relative humidity: < 95% | | 100 | | | M Ω |
| Resistance | Output - 😩 | Test voltage: 500VDC | 100 | | | | |
| Operating Tem | perature | | | -40 | | +70 | |
| Storage Temperature | | | | -40 | | +85 | $^{\circ}$ |
| Operating Humidity | | Non-condensing | | 10 | | 95 | %RH |
| Storage Humidity | | | | 20 | | 90 | |
| | | PFC | | 65 | | | |
| Switching Freq | uency | DC-DC | 62 | | 110 | KHz | |
| | | Auxiliary source | | 65 | | | |
| | Operating | | -40℃ to -30℃ | 6 | | | N 1°C |
| Power Derating | 9 | temperature derating | +50℃ to +70℃ | 2.5 | | | %/℃ |
| Leakage Current | | 277VAC, 60Hz | Touch current | <3.5mA | | | |
| Safety Standards | | | | Design refe | r to IEC/EN/l | JL/BS EN6236 | 8-1 |
| Safety Class | | | | CLASS I | | | |
| MTBF | | MIL-HDBK-217F@25℃ | | 658,3979 h | | | |
| Warranty | | Ambient temperature: < | 5 years | | | | |

place after the test is completed.

| Functional Specificati | ons | | | | | | | |
|-------------------------------------|--|---|-----|----------|------------|--------|--------------|--|
| Item | Operating Cond | ditions | | Min. | Тур. | Max. | Unit | |
| D0 ON In a + 01! | Power on PS_ON high | | | 5 | | 18 | V | |
| PS_ON Input Signal | Power off | PS_ON low | | 0 | | 0.8 | V | |
| Accuracy Of Current sharing* | parallel, the sub | 3+1 When multiple machines are connected in parallel, the sub-module shunt more than 50% of the rated load of every machine | | | ± 5 | | % | |
| Remote Compensation | VS- (Pin 7 and P | The total compensated voltage value when VS+ and VS- (Pin 7 and Pin 5 of CON2 or CON3) are shorted to both ends of the output load ((VS+ to +Vo, VS- to | | | 0.3 | | V | |
| | Main output | Main output Normal output | | Green on | | | | |
| LED Signal | status | Abnormal output, protected | | | Re | ed on | | |
| | indication | Power off (AC without Input) | | | Lig | ht off | | |
| Fisherm at Order, d. Valderare | The output voltage can be adjusted by the external DC power supply. The DC power supply voltage ranges from 1 to 6VDC, corresponding to the output voltage range of 20%-120%lo | | 24V | 4.8 | | 28.8 | V | |
| External Output Voltage Adjustment* | | | 36V | 7.2 | | 43.2 | | |
| • | | | 48V | 9.6 | | 57.6 | | |
| | | e output current can be adjusted by the dernal DC power supply. The DC power | | 40 | | 240 | | |
| External Output Current Adjustment* | supply voltage ranges from 1 to 6VDC, corresponding to the output voltage range of 20%-120%lo | | 36V | 27.6 | | 165.6 | Α | |
| | | | 48V | 21 | | 126 | | |
| Select The Over-current | Different over-c | By default, the output is over-current and the output over-current protection modes can be | | | | | | |
| Protection Mode* | | restart adjusting the DIP Switch 1 of the product when the DIP Switch 1 is selected ON, output voltage is not less than 50% Vo a long-term constant current. When the | | | | | Vo, which is | |

MORNSUN[®]



| | voltage is below 50% Vo, the output will be turned off after 5 seconds and restored after restarting. |
|-------------------|---|
| AC_FAIL | Input voltage loss alarm signal |
| FAN_FAIL | Fan fault alarm signal |
| DC_OK | A normal alarm signal is generated |
| 485 Communication | RS485 A and RS485 B communicate |

Note: 1.*The voltage difference between each prototype should not exceed 0.2V during current sharing test.

2.*When the DC power supply is adjusted from high to low voltage, the floating OVP protection may be triggered under light load or no load.

3.*When the output voltage and current are adjusted, the actual output voltage and current will have a precision difference of about 10% from the given value of the external power supply. The output voltage or current can be adjusted to the set value by continuing to adjust the external power supply value. When the constant current value is >100%lo, long-term work may start OTP protection.

4.*When selecting the external voltage regulation, external current regulation and over-current protection modes, it is required to wait until the auxiliary power is completely powered off before switching the switch.

| Environmental Characteristics | | | | |
|----------------------------------|--|--------------------------|--|--|
| Item | Operating Conditions | Standard | | |
| High And Low Temperature Working | +70℃,-40℃ | GB2423.1, IEC60068-2-1 | | |
| Sinusoidal Vibration | 10 - 500Hz, 2g, three directions of X, Y, Z axis | GB2423.10, IEC60068-2-6 | | |
| Alternating Hot And Humid | +25℃,95%RH ±60℃,95%RH | GB2423.4, IEC60068-2-30 | | |
| Low Temperature Storage | -40 ℃ | GB2423.1, IEC60068-2-1 | | |
| High Temperature Storage | +85 ℃ | GB2423.2, IEC60068-2-2 | | |
| High Temperature Aging | +50 ℃ | GB2423.2, IEC60068-2-2 | | |
| Normal Temperature Aging | +25 ℃ | GB2423.1, IEC60068-2-1 | | |
| Temperature Shock | -40°C to +70°C | GB2423.22, IEC60068-2-14 | | |
| Packaging Drop | 1m, one corner, three edges and six sides | GB2423.8, IEC68-2-32 | | |

| General Specifications | | | | |
|------------------------|----------------------------------|--|--|--|
| Case Material | Metal (AL5052, SPCC, SGCC) | | | |
| Dimensions | 460.00mm x 211.00mm x 83.50mm | | | |
| Weight | 7300g (Typ.) | | | |
| Cooling Method | Built-in fan, forced air cooling | | | |

| | CE (Input port) | 150K - 30MHz | CLASS A | | |
|-----------|----------------------|---------------------------------|---|------------------|--|
| | RE | CISPR32 EN55032 CISPR32 EN55032 | 30MHz -1GHz | CLASS A | |
| Emissions | Harmonic current | IEC/EN61000-3-2 | IEC/EN61000-3-2 | | |
| | Voltage flicker | EN61000-3-3 | EN61000-3-3 | | |
| | ESD | IEC/EN61000-4-2 | Contact ±8KV/Air±15KV | | |
| | RS | IEC/EN61000-4-3 1 | IEC/EN61000-4-3 10V/m | | |
| | EFT (Input port) | IEC/EN61000-4-4 ± | IEC/EN61000-4-4 ±4KV | | |
| | Surge (Input port) | IEC/EN61000-4-5 li | IEC/EN61000-4-5 line-line ±2KV/line-PE ±4KV | | |
| Immunity | MS | IEC/EN61000-4-8 3 | 80A/m | | |
| · | CS | IEC/EN61000-4-6 0 |).15 - 80MHz 10Vr.m.s | | |
| | | | >95% dip 0.5 periods | perf. Criteria B | |
| | Voltage dips | IEC/EN61000-4-11 | 30% dip 25 periods | perf. Criteria B | |
| | Voltage interruption | IEC/EN61000-4-11 | perf. Criteria B | | |

Note: 1. *perf. Criteria:

A: The equipment shall continue to operate as intended without operator intervention;

B: After the test, the equipment shall continue to operate as intended without operator intervention;

C: Loss of function is allowed, provided the function is self-recoverable, or can be restored by the operation of the controls by the user in accordance with the manufacturer's instructions.

2. *An additional 100cm*80cm*2mm iron plate is required for EMI testing.

MORNSUN®

Product Characteristic Curve




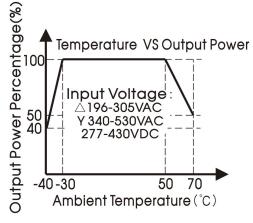


Figure 1



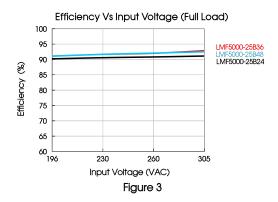


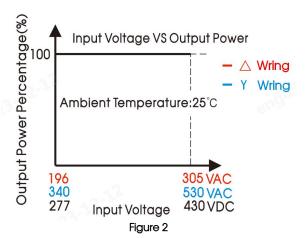

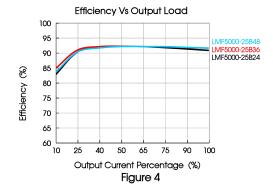

Note: The product is equipped with a built-in cooling fan, Keep the air intake clear of Debris, If the environment cannot meet this requirement, a fanless model is recommended.

Dimensions and Recommended Layout

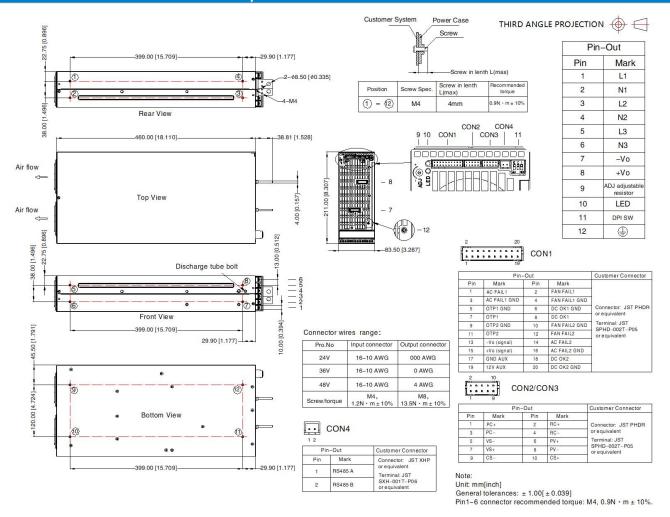



Note:

- 1. For additional information on Product Packaging please refer to www.mornsun-power.com. Packaging bag number: 58220676;
- Unless otherwise specified, parameters in this datasheet were measured under the conditions of Ta=25°C, humidity <75%RH with 2. nominal input voltage and rated output load;
- 3. The room temperature derating of 5°C/1000m is needed for operating altitude greater than 2000m;
- All index testing methods in this datasheet are based on our company corporate standards; 4.
- In order to improve the efficiency at high input voltage, there will be audible noise generated, but it does not affect product performance and reliability;
- We can provide product customization service, please contact our technicians directly for specific information;
- Products are related to laws and regulations: see "Features" and "EMC";
- The out case needs to be connected to PE () of system when the terminal equipment in operating;
- The output voltage can be adjusted by the ADJ, clockwise to increase;
- Our products shall be classified according to ISO14001 and related environmental laws and regulations, and shall be handled by qualified units;
- The power supply is considered a component which will be installed into a terminal equipment. All EMC tests should be confirmed with the final equipment. Please consult our FAE for EMC test operation instructions.

Mornsun Guangzhou Science & Technology Co., Ltd.

Address: No. 8 Nanyun 4th Road, Huangpu District, Guangzhou, China

Tel: 86-20-38601850 Fax: 86-20-38601272 E-mail: info@mornsun.cn www.mornsun-power.com

MORNSUN®

MORNSUN Guangzhou Science & Technology Co., Ltd.

2025.08.29 -A/4 Page 7 of 26




LMF5000-25Bxx Power Supply Application Manual



Content

| 1. Appearance | 10 |
|---|----|
| 1.1 Input terminal (J1) | 10 |
| 1.2 Main output terminal (J2, J3) | 11 |
| 1.3 Signal connection terminal | 11 |
| 1.4 Output voltage regulation and LED light | 12 |
| 2. Function manual | 13 |
| 2.1 Input requirement | 13 |
| 2.2 Output requirement | 15 |
| 2.3 Start-up/Shut-down process | 15 |
| 2.4 Fan speed control | 15 |
| 2.5 Output over voltage protection (OVP) | 16 |
| 2.6 Output over current protection (OCP) | 16 |
| 2.7 Output short-circuit protection (SCP) | 17 |
| 2.8 Over temperature protection (OTP) | |
| 2.9 Output power derates | 17 |
| 2.10 Remote switch | 17 |
| 2.11 Remote compensation | |
| 2.12 Output voltage adjustment | 18 |
| 2.13 Output current adjustment | |
| 2.14 Alarm signal output | 20 |
| 2.15 Parallel current sharing | 21 |
| 3. Installation requirements | 23 |
| 3.1 Safety introduction | 23 |
| 3.2 Safety requirement | 24 |
| 4. Communication protocol | 24 |
| 4.1 Register definition table | 24 |
| 4.2 Instruction data format description | 26 |

1. Appearance

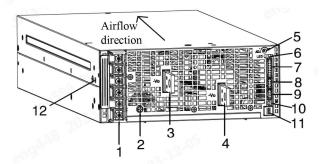

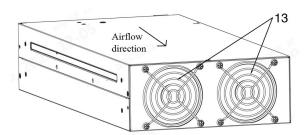



Figure 1: LMF5000-25Bxx appearance information

Composition description:

- 1. Input terminal (J1)
- 2. Ground screw (PE)
- 3. Output terminal negative (J2)
- 4. Output terminal positive (J3)
- 5. Output voltage regulation (ADJ)
- 6. Green and red status display LED lights
- 7. Signal connection terminal (CON1)
- 8. Signal connection terminal (CON2)
- 9. Signal connection terminal (CON3)
- 10. 485 Communication terminal (CON4)
- 11. Working mode selection switch
- 12. Discharge tube screw
- 13. Fan

1.1 Input terminal (J1)

The input terminal J1 uses standard 6-pin fence-welded terminal with covers.

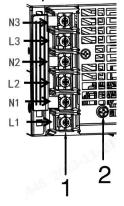


Wire size: 16-10AWG Torque: 1.2Nm

| Number | PIN | Function |
|--------|----------|--------------|
| , | L1/L2/L3 | Line (Phase) |
| 1 | N1/N2/N3 | Neutral |
| 2 | (| Ground/Earth |



1.2 Main output terminal (J2, J3)

The output terminal adopts two metal copper bar terminals J2 and J3.

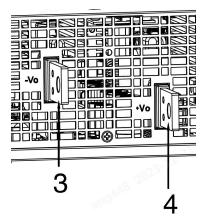


| Number | PIN Function | | |
|--------|--------------|---------------|--|
| 3 | -Vo | Main output - | |
| 4 | +Vo | Main output + | |

Wire size: 000 AWG Torque: 13.5Nm

1.3 Signal connection terminal

(1) CON1 signal terminal

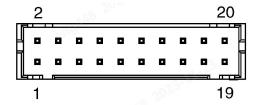

| Connector | JST PHDR series or equivalent |
|-----------|--------------------------------|
| Terminal | JST SPD-002T-P05 or equivalent |

| PIN | Function | Description | | |
|-----|---------------|---|--|--|
| 1 | AC_FAIL1 | AC fail warning signal+ | | |
| 2 | FAN_FAIL1 | Fan fail warning signal+ | | |
| 3 | AC_FAIL1_GND | AC fail warning signal- | | |
| 4 | FAN_FAIL1_GND | Fan fail warning signal- | | |
| 5 | OTP1_GND | Over temperature protection warning signal- | | |
| 6 | DC_OK1_GND | DC_OK warning function- | | |
| 7 | OTP1 | Over temperature protection warning signal+ | | |
| 8 | DC_OK1 | DC_OK warning function+ | | |
| 9 | OTP2_GND | Over temperature protection warning signal- | | |
| 10 | FAN_FAIL2_GND | Fan fail warning signal- | | |
| 11 | OTP2 | Over temperature protection warning signal+ | | |
| 12 | FAN_FAIL2 | Fan fail warning signal+ | | |
| 13 | -Vo (signal) | Output voltage negative, for signal sampling only | | |
| 14 | AC_FAIL2 | AC fail warning signal+ | | |
| 15 | +Vo (signal) | Output voltage positive, for signal sampling only | | |
| 16 | AC_FAIL2_GND | AC fail warning signal- | | |
| 17 | GND_AUX | 12V auxiliary power supply- | | |
| 18 | DC_OK2 | DC_OK warning function+ | | |


AC/DC 5000W Enclosed Switching Power Supply

LMF5000-25Bxx Series

| MO | RNS | UN® |
|----|-----|-----|
|----|-----|-----|

| 19 | 12V_AUX | 12V auxiliary power supply+ |
|----|------------|-----------------------------|
| 20 | DC_OK2_GND | DC_OK warning function- |

(2) CON2 and CON3 signal terminal (Internal connection)

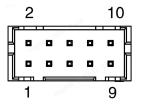

| Connector | JST PHDR series or equivalent |
|-----------|--------------------------------|
| Terminal | JST SPD-002T-P05 or equivalent |

| PIN | Function | Description | | |
|-----|----------|-------------------------------------|--|--|
| 1 | PC+ | External current regulation signal+ | | |
| 2 | RC+ | Remote on-off signal+ | | |
| 3 | PC- | External current regulation signal- | | |
| 4 | RC- | Remote on-off signal- | | |
| 5 | VS- | Remote compensation signal- | | |
| 6 | PV+ | External voltage regulation signal+ | | |
| 7 | VS+ | Remote compensation signal+ | | |
| 8 | PV- | External voltage regulation signal- | | |
| 9 | CS- | Current sharing bus signal- | | |
| 10 | CS+ | Current sharing bus signal+ | | |


(3) CON4 signal terminal



| Connector | JST XHP series or equivalent |
|-----------|--------------------------------|
| Terminal | JST SXH-001T-P06 or equivalent |

| PIN | Function Description | |
|-----|----------------------|---------------------|
| 1 | RS485_A | 485 Communication A |
| 2 | R\$485_B | 485 Communication B |

1.4 Output voltage regulation and LED light

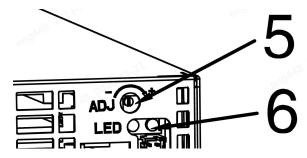

The adjustable range of the output voltage adjustment resistor (clockwise rotation increases the output voltage)





| ID | Model number | Rated output voltage | Output voltage adjustable range |
|----|---------------|----------------------|---------------------------------|
| | LMF5000-25B24 | 24V | 23.5 - 28.8V |
| 5 | LMF5000-25B36 | 36V | 35 - 43.2V |
| | LMF5000-25B48 | 48V | 47 - 57.6V |

Two types of LED lights indicate different working statuses of the power supply:

| ID | Green light | Red light Status | |
|----|-------------|------------------|-----------------------------------|
| | ON | OFF | Normal operation |
| 6 | OFF | ON | Main road or auxiliary load alarm |
| | OFF | OFF | No AC input |

2. Function manual


2.1 Input requirement

The AC input voltage and DC input voltage must be within the defined voltage range (refer to the data sheet), otherwise the power supply may not work properly or even malfunction.


The L lines inside the power module are all connected in series with 600VAC 16A fuses. To bett er protect the module, when using a 3-phase 3-wire or 3-phase 4-wire connection method, it is rec ommended that the customer use a circuit breaker no greater than 16A; when using a 1-phase 2wire or DC input connection method, the circuit breaker should not exceed 48A.

Note: The circuit breaker is for enhanced protection and it is recommended to use type C or t ype D. It is not a mandatory requirement to connect it.


(1) 3-phase 3-wire/△ 230VAC wiring method

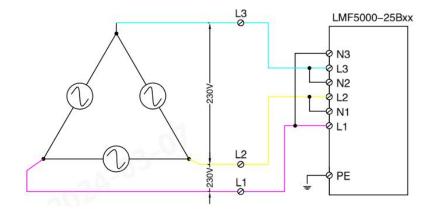


(2) 3-phase 4-wire/Y 400VAC wiring method

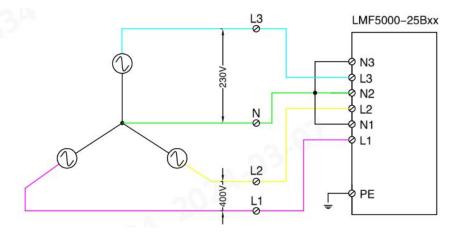

(3) 1-phase 2-wire/230VAC wiring method: LMF5000-25Bxx product can also work with 1-phase 2-wire 196-305VAC input, please refer to the following wiring method. When working in the 1-phase 2-wire wiring method, some specification characteristics may not meet the defined specification values (such as ripple, etc). If any problems occur, please contact our FAE.

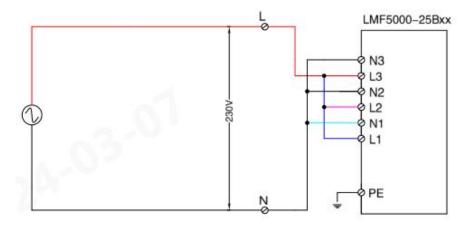

(4) DC input wiring method: LMF5000-25Bxx product can also support DC input 277-430VDC to work, as shown in the figure below of DC input wiring method.

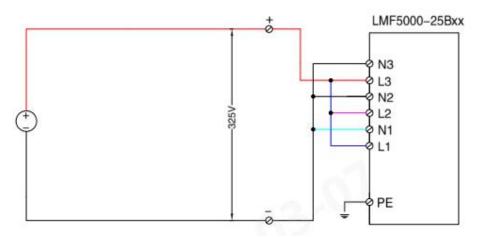



2.2 Output requirement


Main output

At any input voltage, the maximum output current and power must not exceed the rated/specified value. The output current must not exceed the maximum output current value.

Auxiliary output

The auxiliary circuit supports a maximum current of 0.1A and is only used to supply power to the switch signal.

2.3 Start-up/Shut-down process

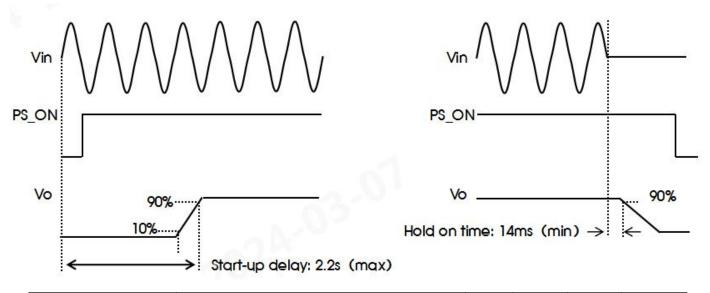

| Item | Operating Conditions | | Min. | Тур. | Max. | Unit |
|---------------------|---|---------|------|------|------|------|
| Power-off Hold Time | 230VAC at room temperature and full load | 75% lo | 20 | | | ms |
| | | 100% lo | 14 | | | |
| Start Delay Time | 230VAC at room temperature and full load | | | | 2.2 | s |


2.4 Fan speed control

The speed of the fan is jointly determined by the ambient temperature, output current, and output power and is linearly adjusted. To ensure the reliability of the product, the fan will continue to rotate at a minimum speed of 35%. The fan speed will increase with the increase of current, and the maximum adjustment can be up to 100%. The maximum speed adjustment of power compensation is 70%, and the maximum compensation value of power compensation and current compensation is taken. When the temperature is greater than 50°C, the fan temperature compensation reaches the maximum, and the fan will rotate at full speed.




2.5 Output over voltage protection (OVP)

The over-voltage protection function is to turn off the main output when the output voltage reaches the protection voltage value. When the main circuit over voltage protection occurs, the main output voltage of the module will be shut off, and the auxiliary circuit output will not be affected. After the fault is rectified, restart the main power supply to restart the main power supply to restore the output.

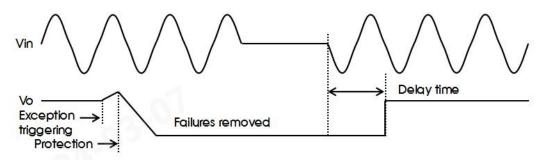

In addition, it can also be quickly restarted and restored by PS_ON signal:

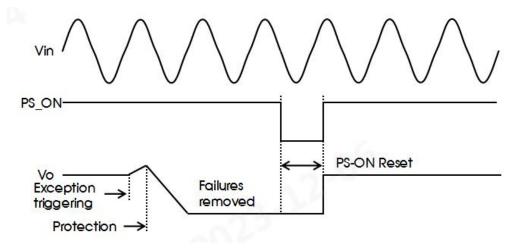

2.6 Output over current protection (OCP)

(1) Continuous constant current mode

voltage is 50% higher than the rated output voltage, it works in long-term constant current mode (long-term constant current may trigger OTP protection).

(2) Delayed shutdown mode

Switch DIP-SW position-1 is set to mode ON When the output is overloaded or short-circuited,

the output is turned off after 5s(typ), and the output is restarted after the fault is rectified.



2.7 Output short-circuit protection (SCP)


When a short circuit occurs in the output, the constant current protection is triggered. The output will be turned off after 5s (typ), and the output will restart after the fault is rectified.


2.8 Over temperature protection (OTP)

When the ambient temperature of the power supply exceeds the rated temperature for a period of time, the power output will be turned off. When the ambient temperature decreases to set value, the power supply will resume normal operation.


2.9 Output power derates

When ambient temperature is higher than 50° C or lower than -30° C, perform power derating according to the derating curve;

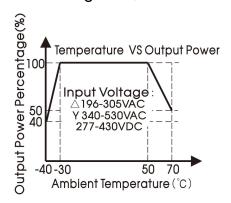

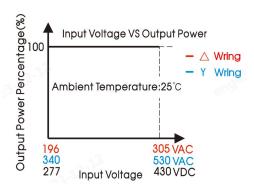

2.10 Remote switch

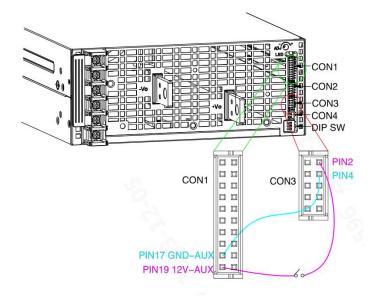


| Between on/off (CON2 or CON3 PIN2) and 12V-AUX (CON1 PIN19) | Output state | | |
|---|--------------|--|--|
| Switch on (short circuit) | Output on | | |
| Switch off (open circuit) | Output off | | |



In addition, the PS_ON function of the power module can also directly add 5V-18V voltage between PIN2 and PIN4 of CON2 or CON3 through the external control voltage, and the power module starts; when the external voltage ranges from 0V-0.8V, the power module shuts down.

2.11 Remote compensation

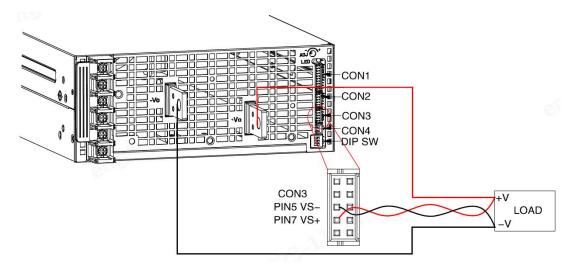

The PIN7 and PIN5 pins of signal terminal CON2 or CON3 compensate the voltage drop on the output cable up to 0.3V.

Note: (1) VS+ and VS- cannot be shorted or reversed, otherwise the power module will be damaged. If the remote compensation function is required, the signal pin needs to be connected to the load terminal using a twisted pair.

(2) If the remote compensation function is not necessary, the connection of the VS+ and VS- terminals should be protected from noise and interference signal (VS+ and VS- are connected to the output +Vo and -Vo by default).

2.12 Output voltage adjustment


- (1) Adjust by semi-fixed variable resistor (ADJ)
- (a) Switch DIP-SW position-3 sets mode ON OFF
- (b) The output voltage can be adjusted by ADJ, and the adjustment range is:

23.5V - 28.8V @LMF5000-25B24

35V - 43.2V @LMF5000-25B36


47V - 57.6V @LMF5000-25B48

- (2) Adjust by external voltage
- (a) Switch DIP-SW position-3 sets mode

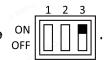




(b) By adding an external voltage between PIN6 PV+ and PIN8 PV- of CON2 or CON3, the output voltage is adjustable from 20% to 120% of the rated voltage.

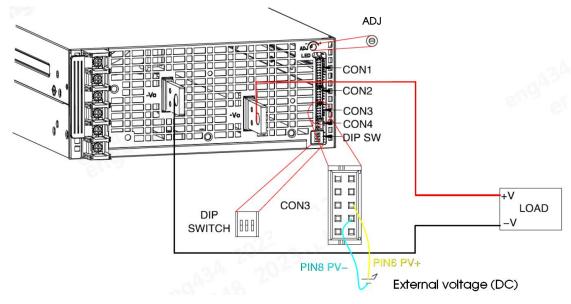

Note: In light load or no load, the product floating OVP protection may be triggered when the external voltage is adjusted from high to low. It is advised to shut down the external voltage to the lowest level and then adjust it upward. When the external voltage is the lowest or highest, the corresponding output constant current value and the voltage on the curve have a certain accuracy difference. To obtain the corresponding output current, it is recommended to fine-tune the external voltage.

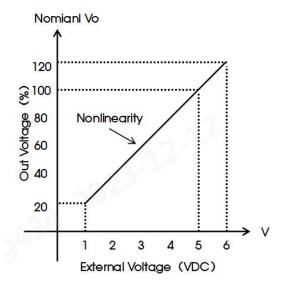


2.13 Output current adjustment


- (1) Default overload constant current protection value
- (a) Switch DIP-SW position-2 sets mode ON OFF
- (b) The output constant current value is the default value.



- (2) External constant current adjustment
- (a) Switch DIP-SW position-2 sets mode
- (b) By adding an external voltage between PIN1 PC+ and PIN3 PC- of CON2 or CON3, the output voltage is adjustable from 20% to 120% of the rated current.

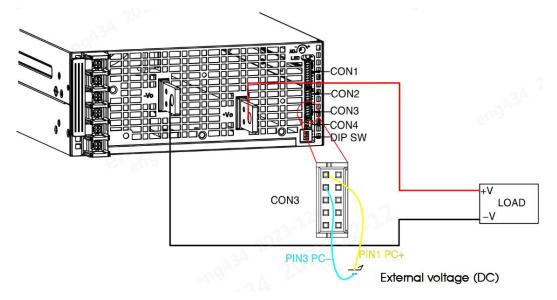


Note: When the external voltage is at the lowest or highest, the corresponding output constant current value and the voltage on the curve have a certain accuracy difference. To obtain the corresponding output current, it is recommended to fine-tune the external voltage.

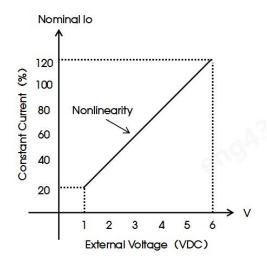


2.14 Alarm signal output

There are four alarm signals in CON1, and two output circuits can be selected for each signal.

(1) Relay contact output {(OTP1, OTP1-GND); (DC-OK1, DC-OK1-GND); (AC-FAIL1, AC-FAIL1-GND); (FAN-FAIL1, FAN-FAIL1-GND)} normally open contact. An alarm is generated when a short circuit occurs. The maximum capacity of the relay contact is 30V/1A.

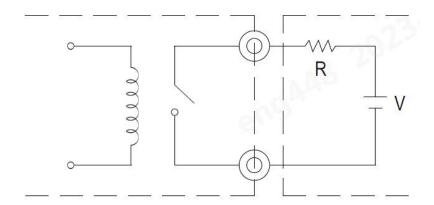

(2) Open collector output {(OTP2, OTP2-GND); (DC-OK2, DC-OK2-GND); (AC-FAIL2, AC-FAIL2-GND); (FAN-FAIL2, FAN-FAIL2-GND)} as shown in the figure below. This function requires an external voltage source (The recommended pull-up resistance between the external voltage source and each signal is $10K \Omega$). These signals are isolated from the output, with a maximum absorbed current of 10mA and a maximum external voltage of 20V (there is a 24V regulator inside the circuit).

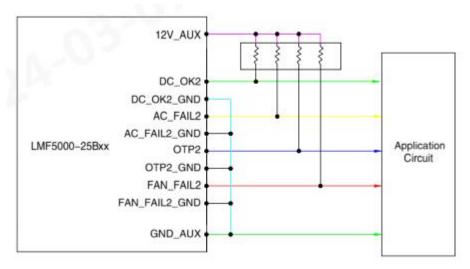

2.15 Parallel current sharing

- (1) The power module has an active current sharing function and supports a maximum of 4 parallel outputs. In parallel operation, the output voltage difference between each power module must be meet ≤0.2V.
- (2) When power modules are connected in parallel, there is an active current-sharing circuit inside to ensure that the current between each module is balanced. Each power module has a current-sharing bus, and when connected in parallel, all current-sharing buses of the power modules must be connected together. The current-sharing bus signal is located on the PIN10 CS+ and PIN9 CS- pins of CON2 or CON3.

After the output load of each power module exceeds 50% of the rated load , the current sharing accuracy is required to be $\pm 5\%$. The current sharing calculation formula is:


Current sharing accuracy=
$$\frac{Io \max - Io \min}{Io \max + Io \min} *100\%$$



Iomax: Maximum output current value of power modules connected in parallel Iomin: Minimum output current value of power modules connected in parallel

- (3) VS+, VS-, CS+, CS- and RC+, RC- need to be connected in parallel to each other.
- (4) When power modules are connected in parallel, the remote compensation sampling line must be connected to the main power module. And the remote compensation sampling line needs to be at least 30cm away from the input line.
- (5) To ensure current sharing among the outputs of each power supply during parallel operation, the load lines used by the power supplies should have the same length and impedance. It is recommended that the metal material, wire diameter, length, and quantity be the same.
- (6) Signal lines (such as remote compensation lines, current balancing lines, etc.) should be ke pt away from high-interference areas/lines (such as input lines, high-current lines, motor drive lines, high-frequency lines, etc.). Special attention should be paid to avoiding crossing, to prevent signal I ines from being interfered with.



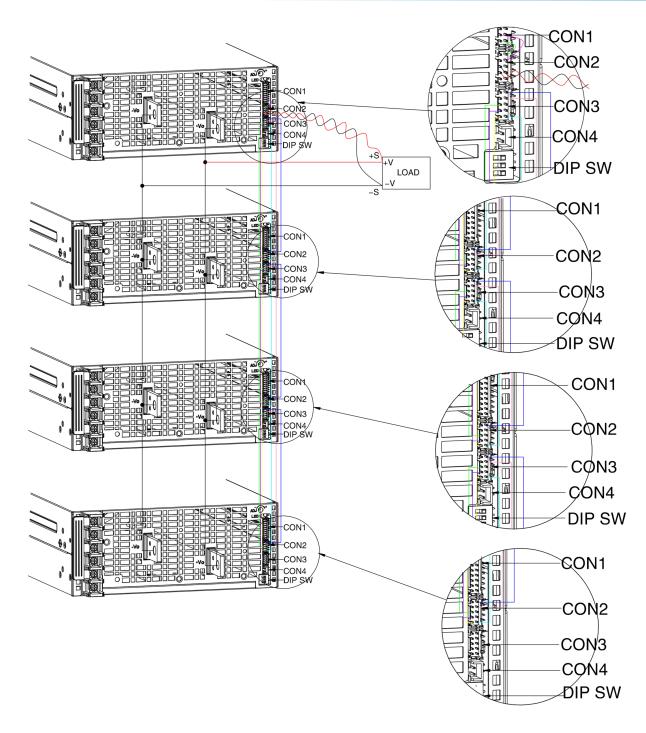

3. Installation requirements

3.1 Safety introduction

Warning

Risk of electric shock

During high voltage operating

 The power supply module is disconnected from the input DC or the AC power and placed for at least one minute before starting to operate it.



- When installing the input wire to the power module, please connect the ground terminal first, and then connect the L line and the N line.
- When removing the input wire, please remove the L wire and the N wire first, and then remove the ground wire.
- When disassembling, make sure that no objects fall into the power module.
- Pay attention to high temperature.
- After the power module is working in a high temperature environment, wait for its shell to cool down before operating.
- This product needs to be installed by professionals and needs to be used with other equipment

3.2 Safety requirement

When installing, pay attention to the primary side and the protective ground, the creep distance and the electrical clearance of the primary side and the secondary side refer to EN62368.

4. Communication protocol

The LMF5000-25Bxx power supply adopts the standard Modbus communication protocol, and can read the product information, real-time working status and fault information of the power supply through the Modbus command. The LMF5000-25Bxx power communication hardware circuit uses RS485 bus. The receiving and sending terminals must be consistent. If they are inconsistent, add hardware circuits for level conversion.

Baud rate: 38400 Baud/S (default)

Data bits: 8 bits Start bit: 1 bit Stop bit: 1 bit

Parity check bit: No

The maximum delay allowed between bytes within a frame is 20ms, and incomplete data frames received beyond this delay time will be discarded.

The delay time between frames should be greater than 200 ms.

4.1 Register definition table

| Register address | Parameter | Read or Write | Parameter description | | | |
|---------------------|------------------------|------------------|---|--|--|--|
| 0-63 | Product information | Read | 0-17 bytes for product manufacturer information; 18-35 bytes indicates the product model information; 36-53 bytes for product origin information; 54-71 bytes is the production data of the product; 72-89 bytes indicates the bar-code information of the product; | | | |

MORNSUN®



| | | | 92-109 bytes indicates the firmware version information; | | | | | |
|-------|--------------|----------|---|-------------------------------------|--|--|--|--|
| | | | The above information is character data. | | | | | |
| | | | Before modifying the parameter, it is required to write 0xBC to the | | | | | |
| | | | write protection Enable register (address 68) and modify the | | | | | |
| | | | parameter. | | | | | |
| | | | The IP address ranges from 1 to 254 | I. Before modifying the | | | | |
| // | Communicatio | \ | parameter, it is required to write 0xAC to the write protection | | | | | |
| 66 | n address | Write | Enable register (address 68) and me | odify the parameter (default | | | | |
| | | | address:1). | | | | | |
| | | | 0:9600bit/s 1:19200bit/s 2:3840 | Obit/s 3:76800bit/s | | | | |
| 47 | Baud rate | \ | Before modifying the parameter, it | is required to write 0xAC to the | | | | |
| 67 | setting | Write | write protection Enable register (ac | ddress 68) and modify the | | | | |
| | | | parameter. | | | | | |
| | Write | | Enable parameter modification wh | en the register is written to the | | | | |
| 68 | protection | Write | secret key. | on the register is willten to the | | | | |
| | enable | | occion keyi | | | | | |
| 69 | Preceding | Read | Bit0: AC input state | 0Abnormal 1Normal | | | | |
| | state | - NOGG | Bit2: BUS voltage state | 0Abnormal 1Normal | | | | |
| | | Read | Bit0: AC input staterelay output | 1Abnormal 0Normal | | | | |
| | | | Bit1: Over temperature protectionrelay output | | | | | |
| | | | | 1Abnormal 0Normal | | | | |
| 70 | Post state | | Bit2: Fan fault-relay output | 1Abnormal 0Normal | | | | |
| | | | Bit5: Output voltage state | 0-Abnormal 1Normal | | | | |
| | | | Bit 1 1: PS_ON signal state 0Power off 1Power on | | | | | |
| | | | Bit 13: Output voltage staterelay output 0Abnormal 1Normal | | | | | |
| | | | Bit 14: Modbus switch control state 0Power off 1Power on | | | | | |
| | | | Bit0: Output over voltagehardwar | | | | | |
| | | | Bit1: Output over voltagesoftware | | | | | |
| | | | Bit2: Constant current-delay protection | | | | | |
| | | | 0Normal 1Abnormal | | | | | |
| | | | Bit3: Long-term constant current exception protection 0Normal | | | | | |
| 71 | Trouble code | ode Read | | 1Abnormal | | | | |
| | | | Bit4: External regulating voltage sign | | | | | |
| | | | 0Normal 1Abnormal | | | | | |
| | | | Bit5: External regulating current sign | nai 0Normal 1Abnormal | | | | |
| | | | Rith: Over temperature protection | | | | | |
| | | | Bit6: Over temperature protection Bit7: Fan fault | 0Normal 1Abnormal 0Normal 1Abnormal | | | | |
| 7175 | Sot voltage | Doga | | | | | | |
| 74-75 | Set voltage | Read | The value is a single-precision floati | ng-point number and the data | | | | |

MORNSUN®



| | | | format is big-endian, unit V |
|----------------------|----------------|-------|--|
| Output | | Dogad | The value is a single-precision floating-point number and the data |
| 80-81 | voltage | Read | format is big-endian, unit V |
| 90.93 | Output augment | Događ | The value is a single-precision floating-point number and the data |
| 82-83 Output current | | Read | format is big-endian, unit A |
| 84-85 Output power F | | Dead | The value is a single-precision floating-point number and the data |
| | | Read | format is big-endian, unit W |
| 04 07 | Ambient | Događ | The value is a single-precision floating-point number and the data |
| 86-87 | temperature | Read | format is big-endian, unit $^{\circ}\mathrm{C}$ |
| 00.00 | Hot spot | | The value is a single-precision floating-point number and the data |
| 88-89 | temperature | Read | format is big-endian, unit $^{\circ}\mathrm{C}$ |

4.2 Instruction data format description

(1) The upper computer sends instructions

| Address | Functi on code | Register origin address (high type) | Register origin address (low type) | Number of registers (high type) | Number of registers (low type) | CRC16 checking (low type) | CRC16 checking (high type) |
|---------|----------------------|---|------------------------------------|---------------------------------------|--------------------------------------|---------------------------|-------------------------------------|
| 01 | 03 | xx | xx | xx | xx | XX | XX |

(2) Power return data

| Address | Function | Number | The value | The | The | The value | CRC16 | CRC16 |
|---------|----------|----------|-------------|------------|----------------|------------|----------|----------|
| | code | of bytes | of register | value of | value of | of | checking | checking |
| | | | 0 | register 0 | register x | register x | (low | (high |
| | | | (high | (low | (high | (low | type) | type) |
| | | | type) | type) | type) | type) | | |
| 01 | 03 | XX | xx | xx | xx | xx | xx | xx |

Note: The data in the preceding commands is hexadecimal.

For more details, please contact MORNSUN FAE.